

# 1





## Kit 187037

FORD Transit Custom, 4-dr Van, 13-18, 18-  
FORD Tourneo Custom, 5-dr Bus, 13-18, 18-




ISO 11154-E


This kit is only for vehicles with fixpoint mounting.


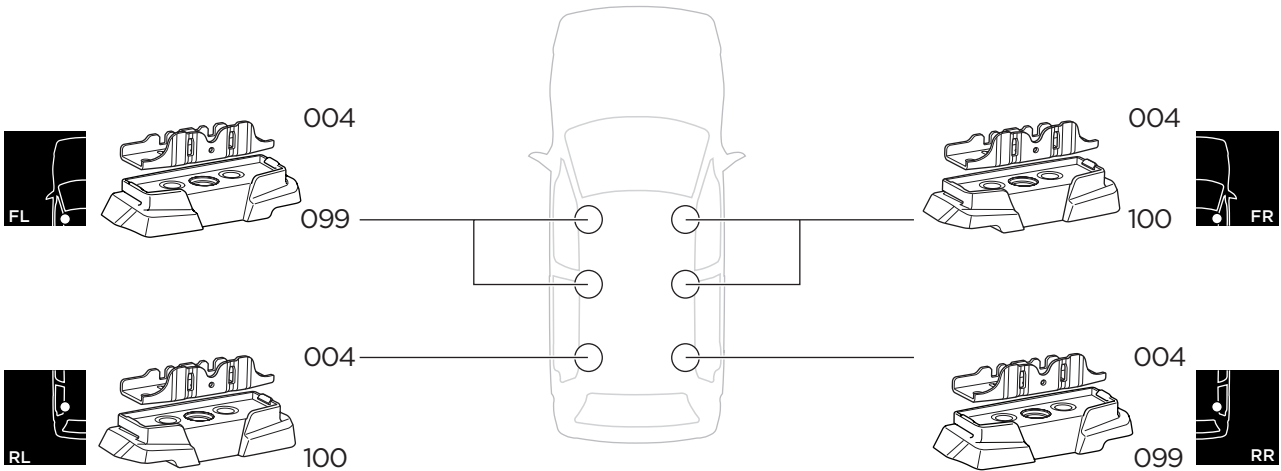
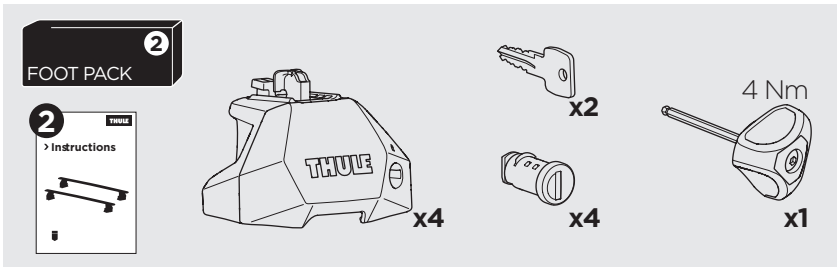
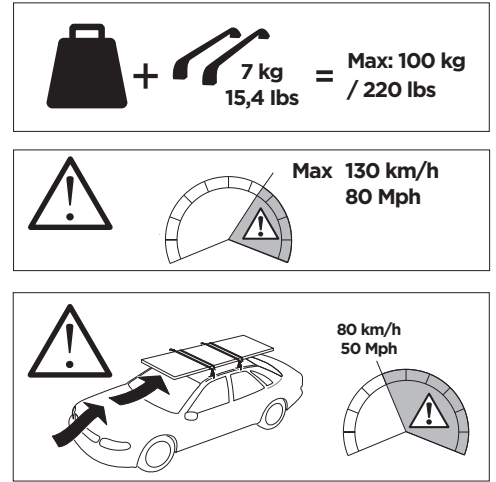
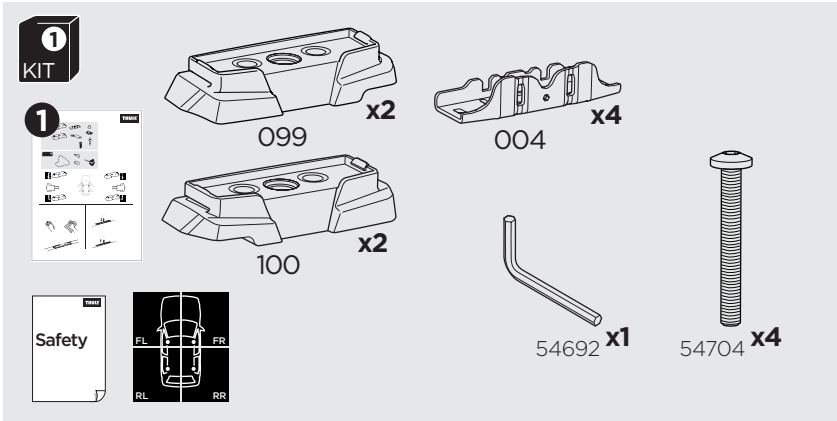


### 1

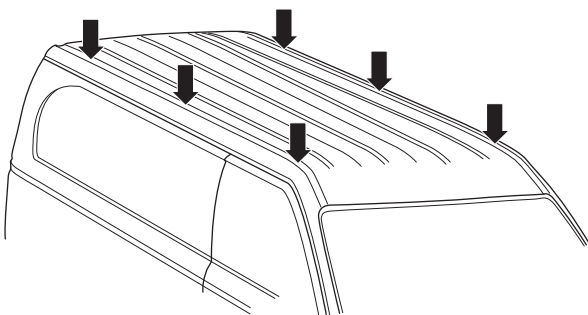


### 2

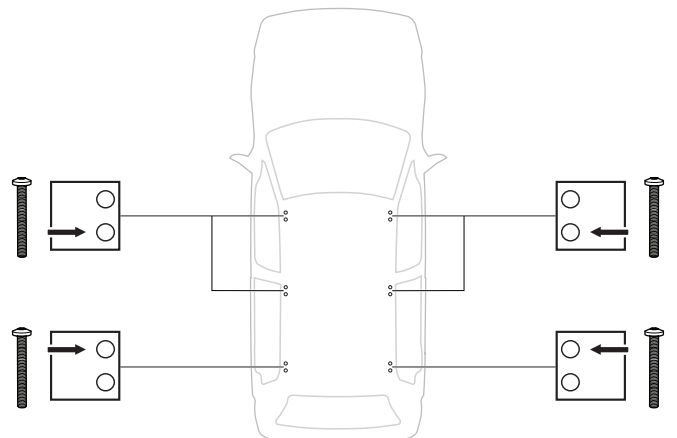

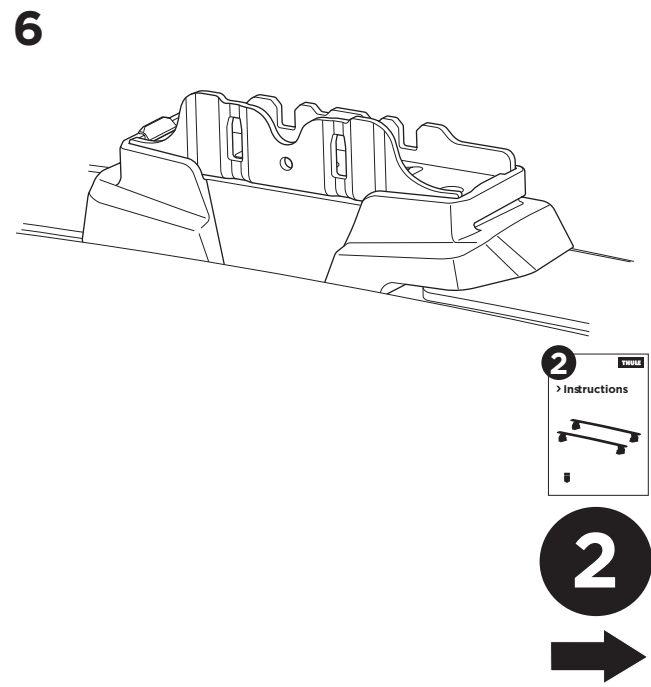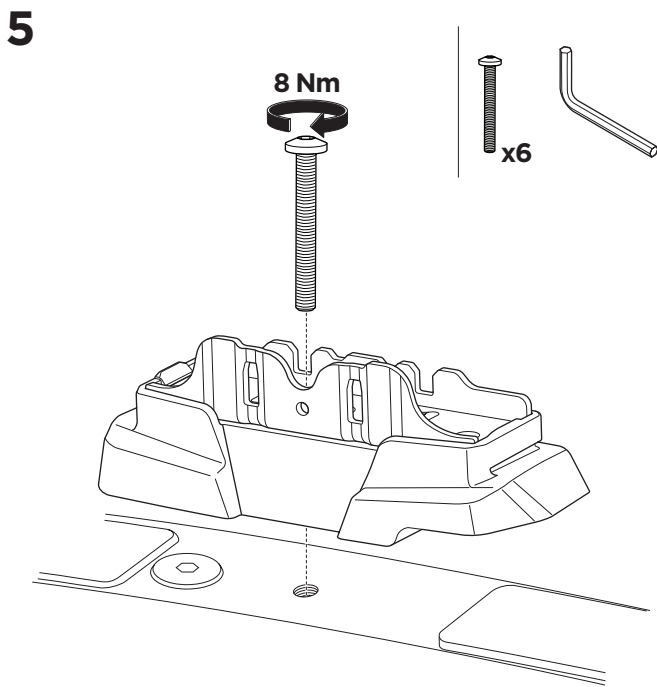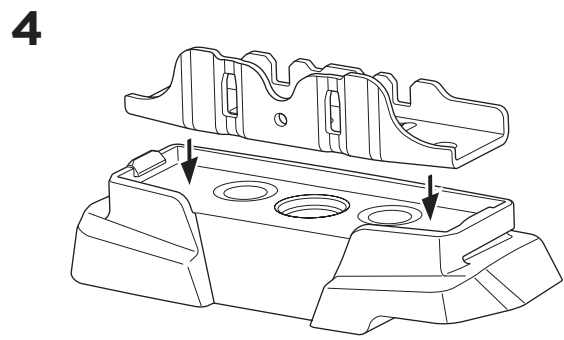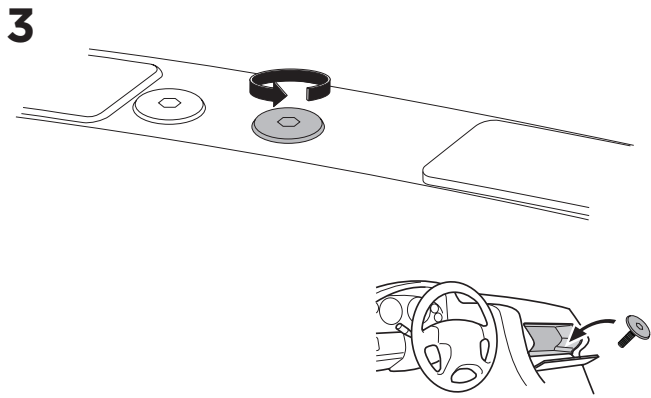

**A**

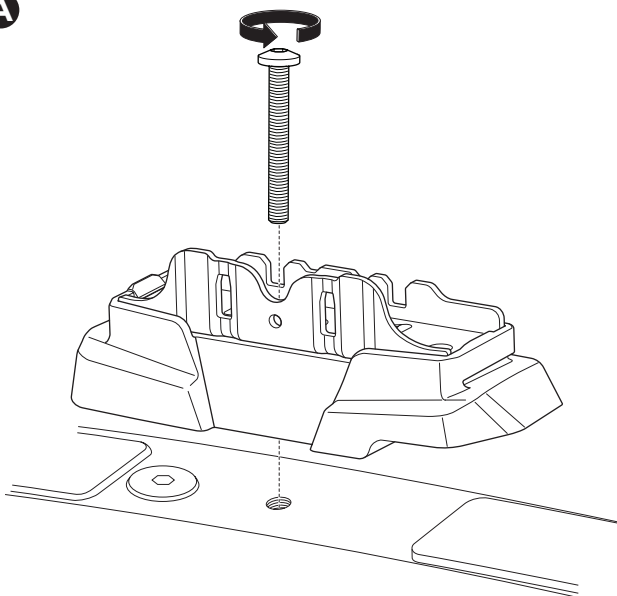

**B**

