




1

Kit 187107

VOLKSWAGEN California, 4-dr Bus, (T5) 03-15, (T6) 15-
 VOLKSWAGEN Caravelle, 4-dr Bus, (T5) 03-15, (T6) 15-
 VOLKSWAGEN Multivan, 4-dr Bus, (T5) 03-15, (T6) 15-
 VOLKSWAGEN Shuttle, 4-dr Bus, (T5) 03-15, (T6) 15-
 VOLKSWAGEN Transporter, 4-dr Double cab, (T5) 03-15, (T6) 15-
 VOLKSWAGEN Transporter, 4-dr Van, (T5) 03-15, (T6) 15-



ISO 11154-E

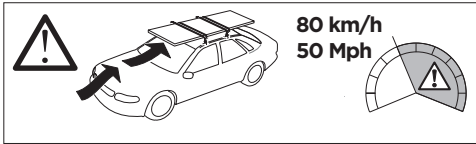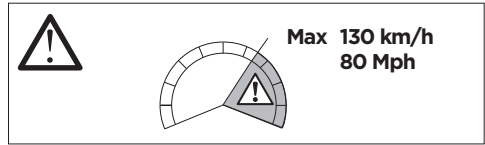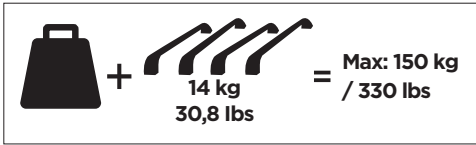

This kit is only for vehicles with fixpoint mounting.

1
KIT

1

Safety

062 **x2**

116 **x2**

004 **x4**

5 mm
54692 **x1**

M6x53 mm
54704 **x2**

M6x69 mm
54704 **x2**

2
KIT

2

Safety

062 **x4**

004 **x4**

5 mm
54692 **x1**

M6x53 mm
54704 **x4**


Kit 187001

EXT.
PAD

760 **x2**


Bring your life
 thule.com

i

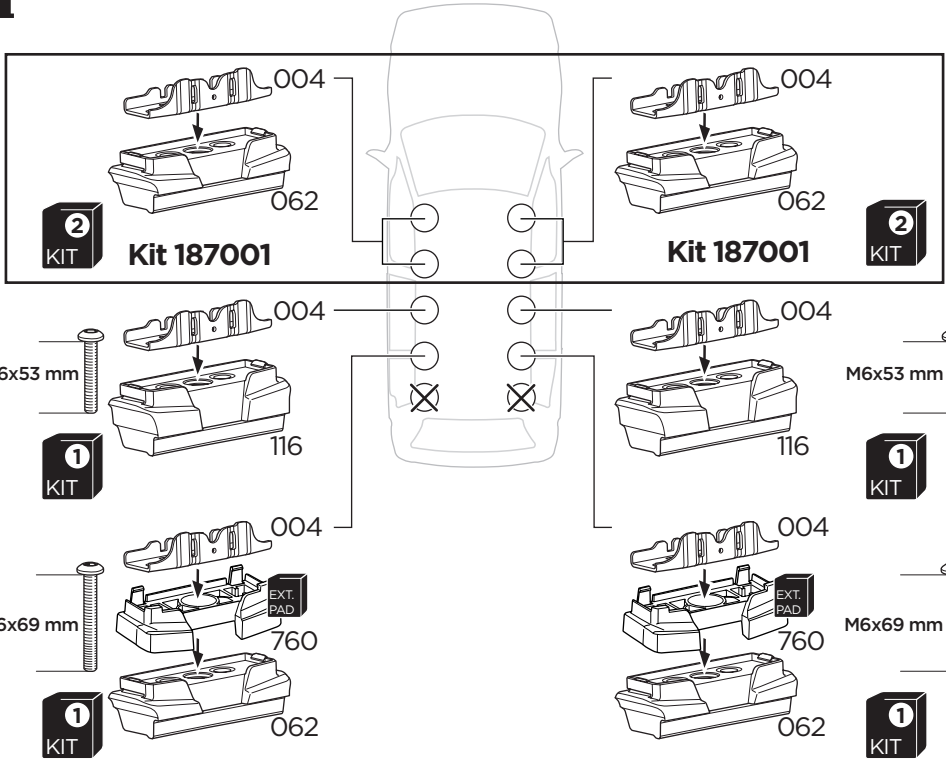


1

A

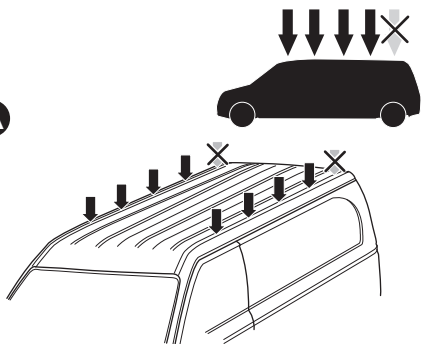


B

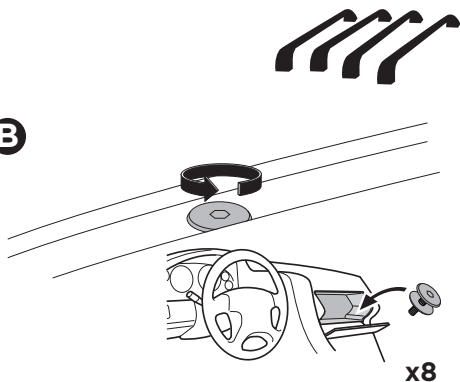


x8

C

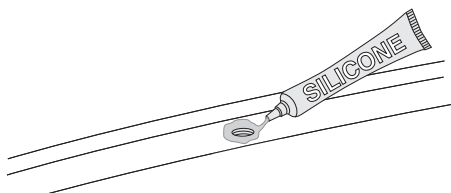


x8


2

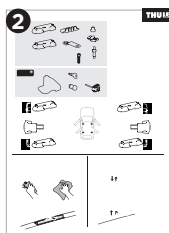


Kit 187001

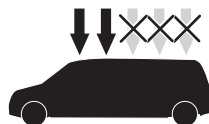


3




8 Nm

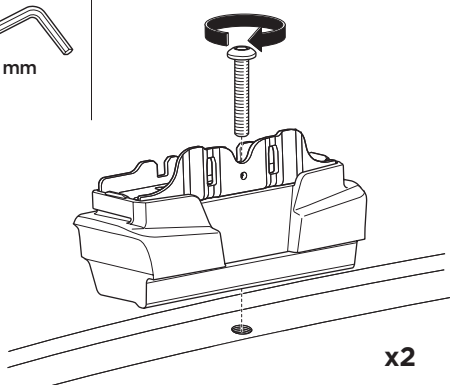

x2

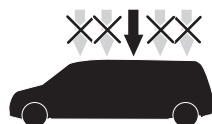

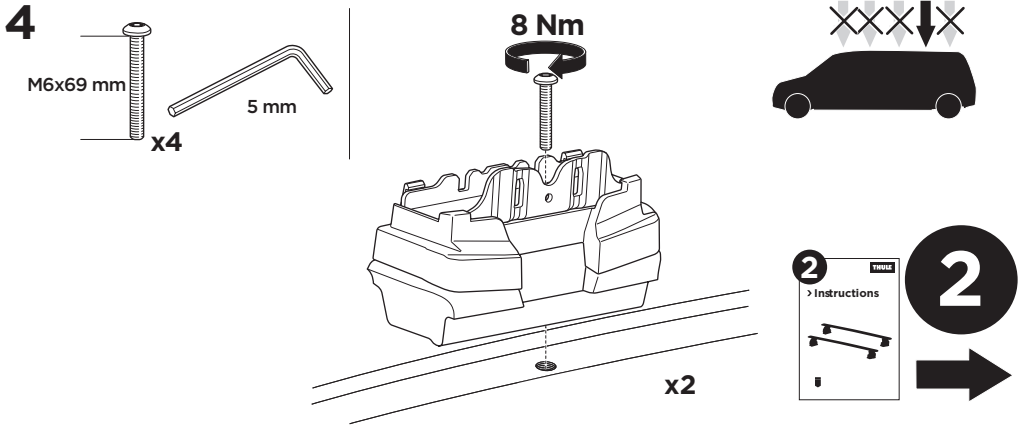

i

