



PEUGEOT 2008 2013↑

PU Side Mouldings

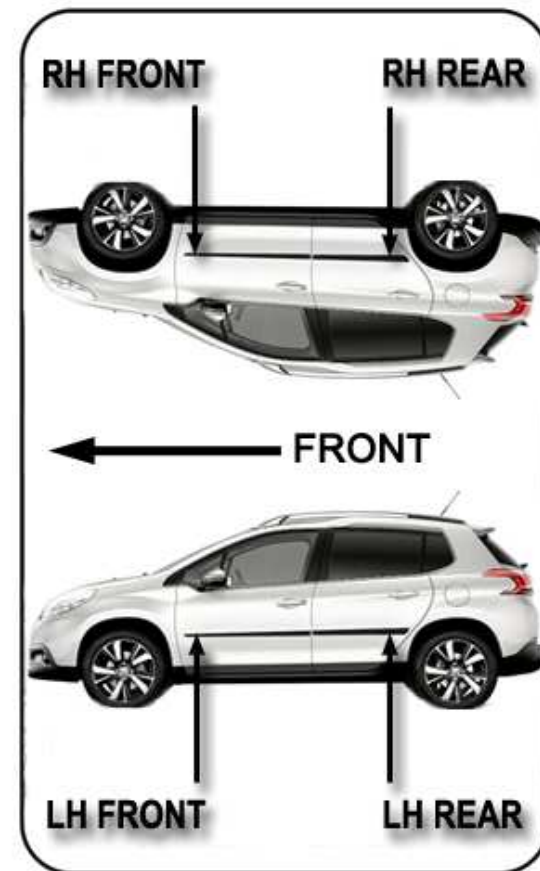

Degrease/entlatten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

1

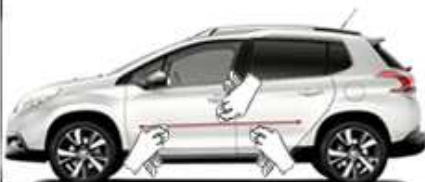

20-40 °C

2



3



4



5



ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrucken jeden cm !!

