
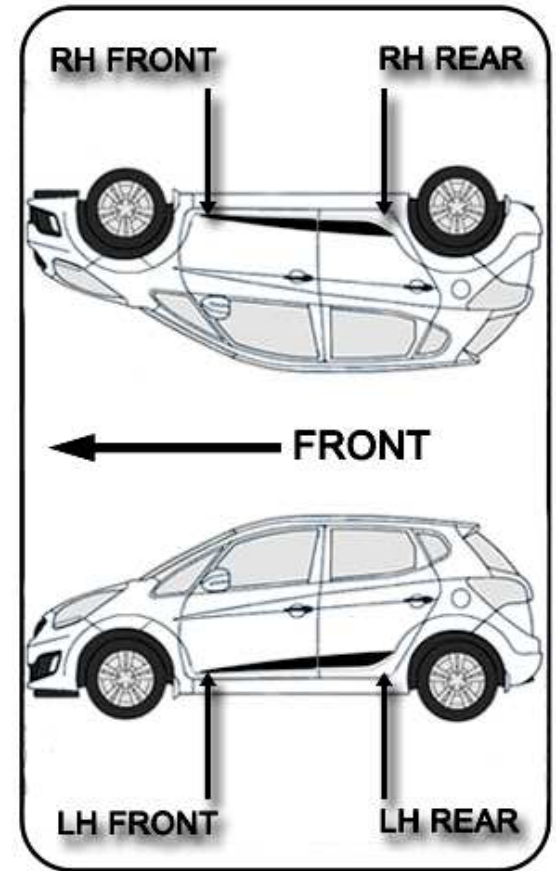



# HYUNDAI ix 20 2010↑

## PU Side Mouldings

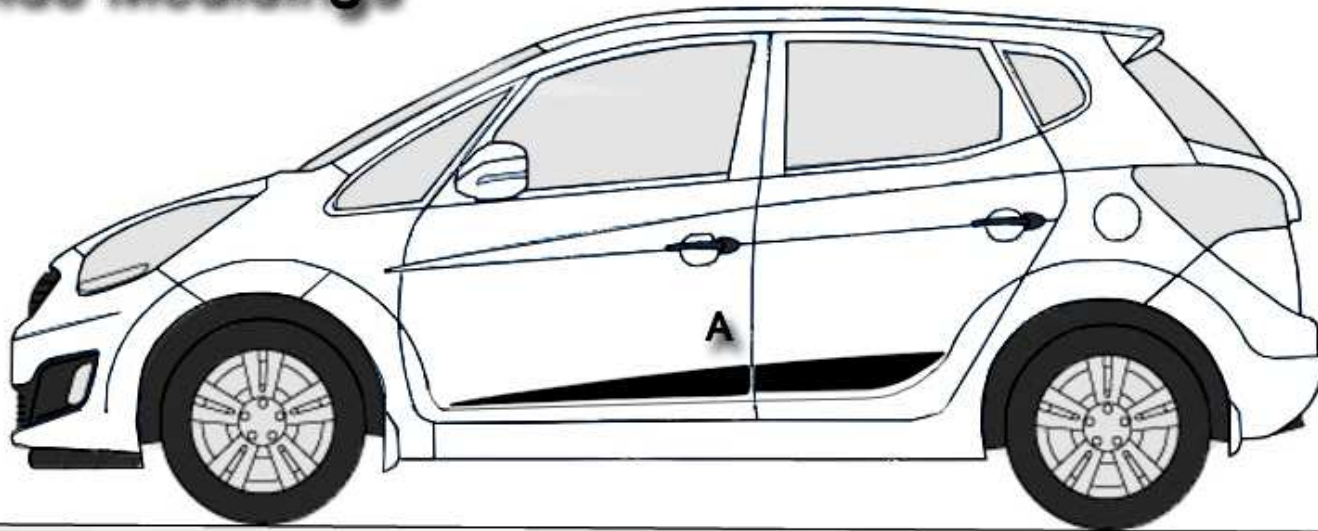


Degrease/entletten/degraisser/ontvetten  
Alcohol/Alkohol/Alcool/Alcohol

1

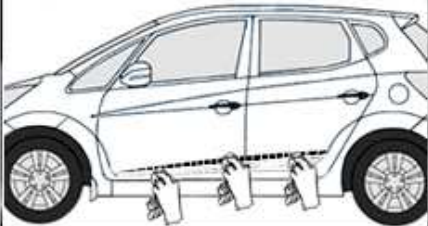

20-40 °C



2

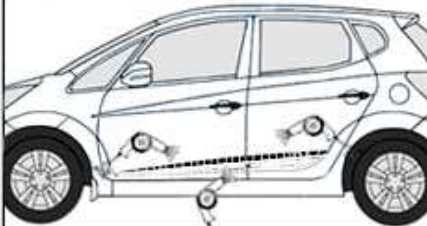

3



4

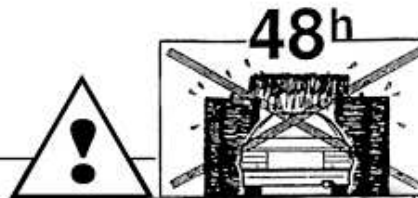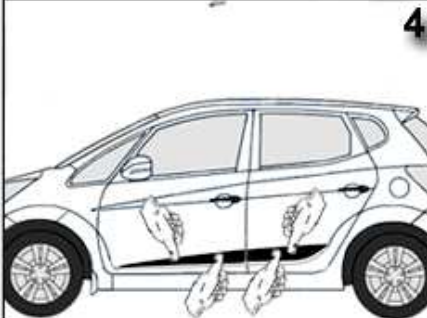

5



ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrucken jeden cm !!

