

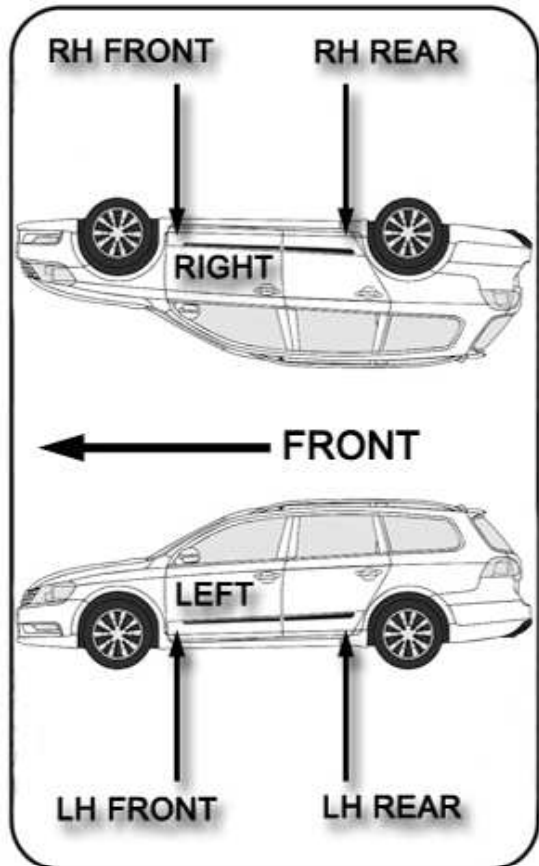


VOLKSWAGEN PASSAT B7 KOMBI / ALLTRACK





PU Side Mouldings

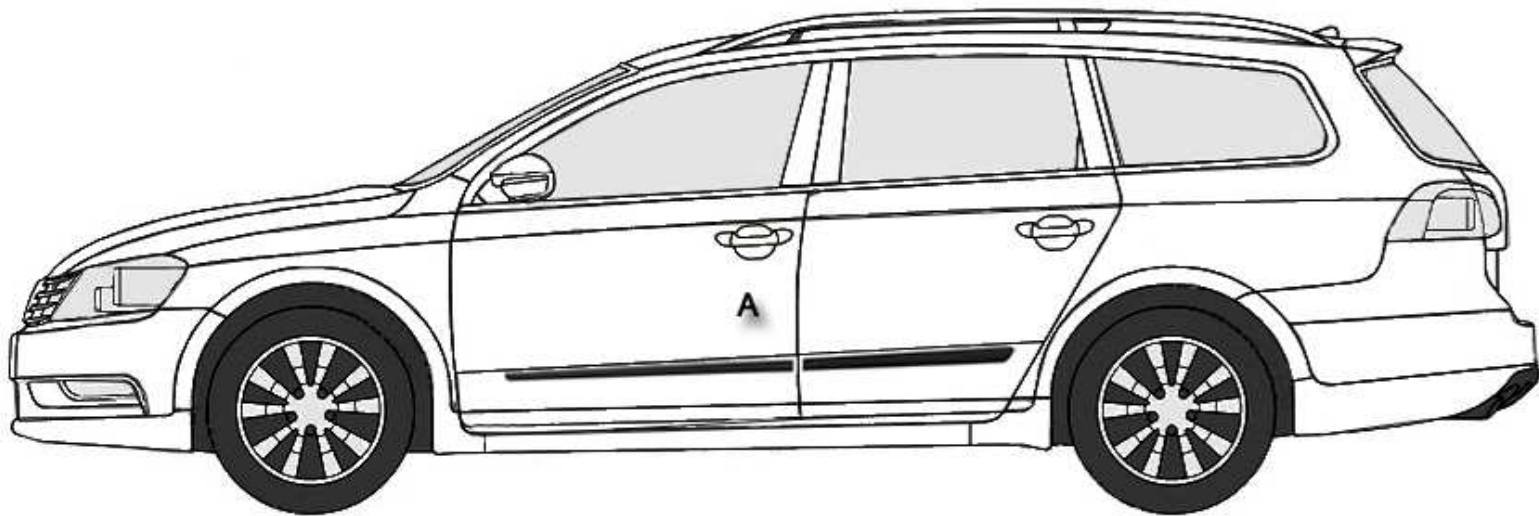

1
Degrease/entletten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

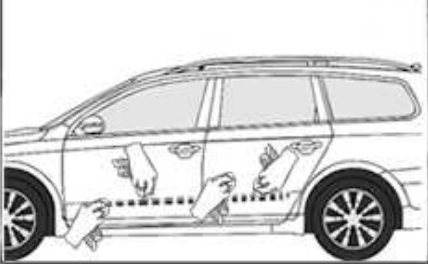

2
20-40 °C

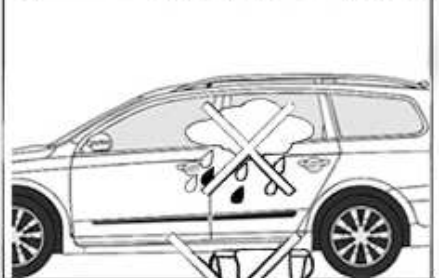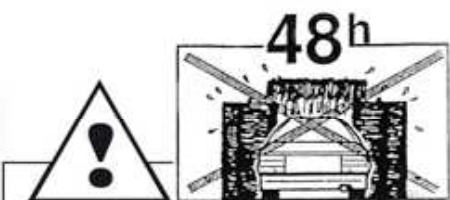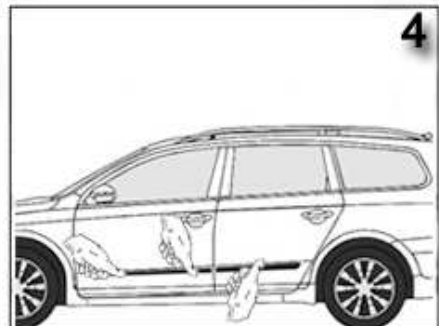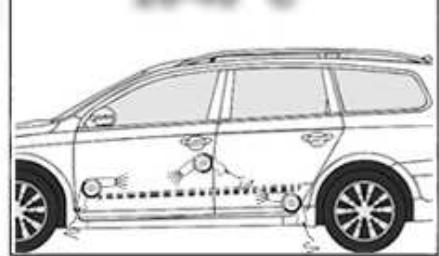

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrucken jeden cm !!

