

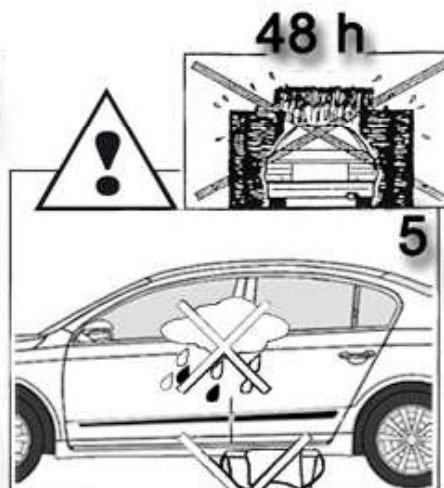
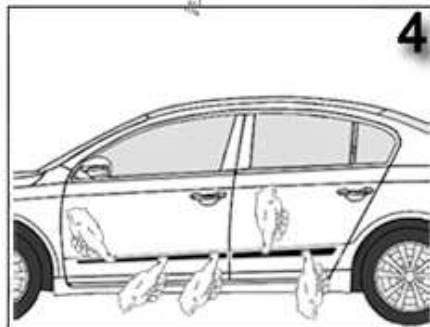
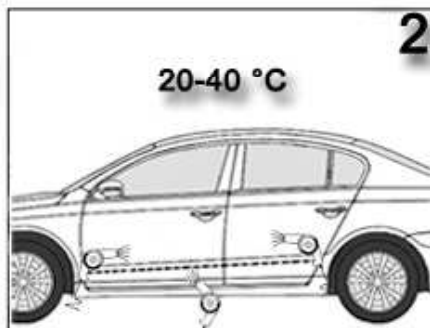


VOLKSWAGEN PASSAT B7 (2010 ↑)

PU Side Mouldings

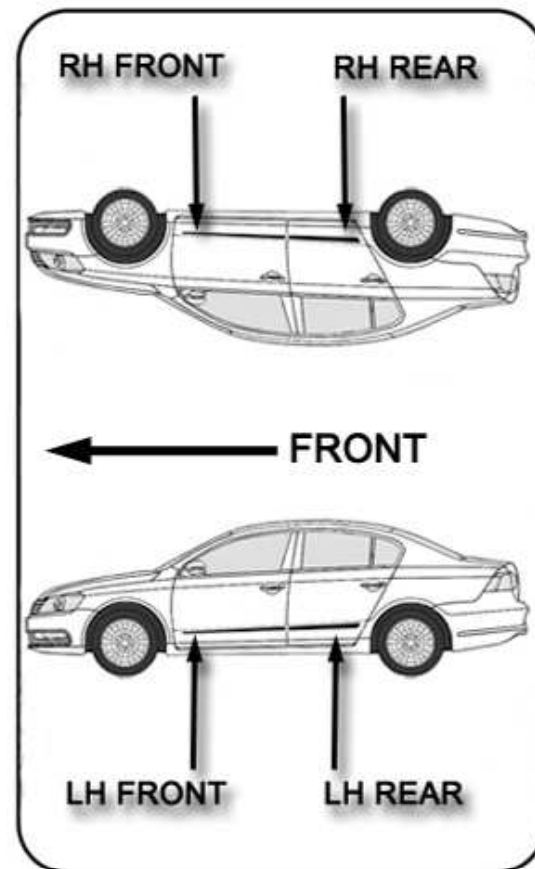

Iedere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

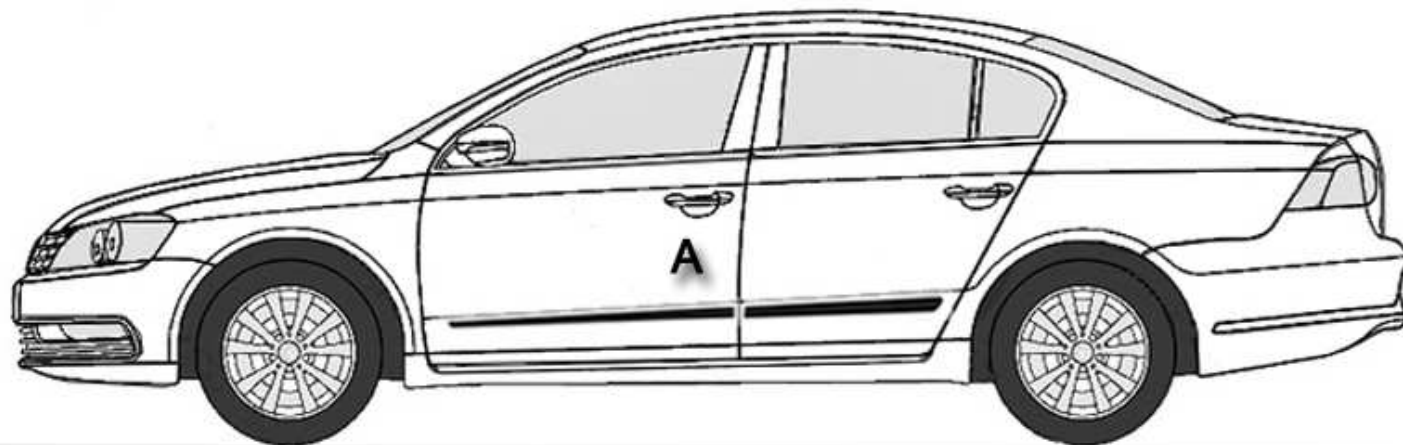