


# SEAT TOLEDO 2013↑

## PU Side Mouldings

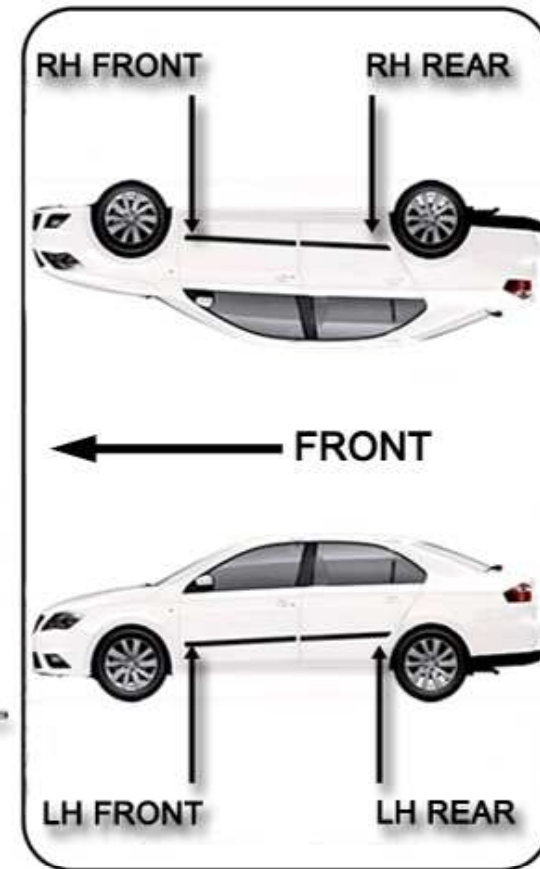

1  
Degrease/entletten/degraisser/ontvetten  
Alcohol/Alkohol/Alcool/Alcohol




2  
20-40 °C



3



4

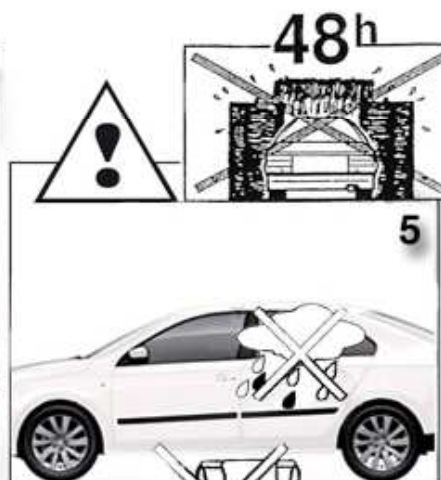

Iedere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrucken jeden cm !!

