


Ford Focus Mk III kombi 2011→ PU Side Mouldings F-14

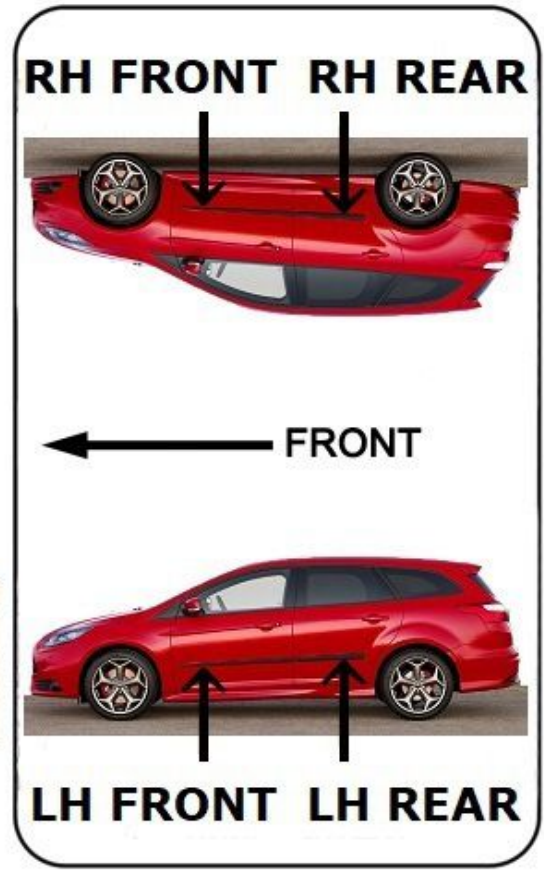

1
Degrease/entletten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

2
20-40 °C

48h

3

4

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrucken jeden cm !!

