
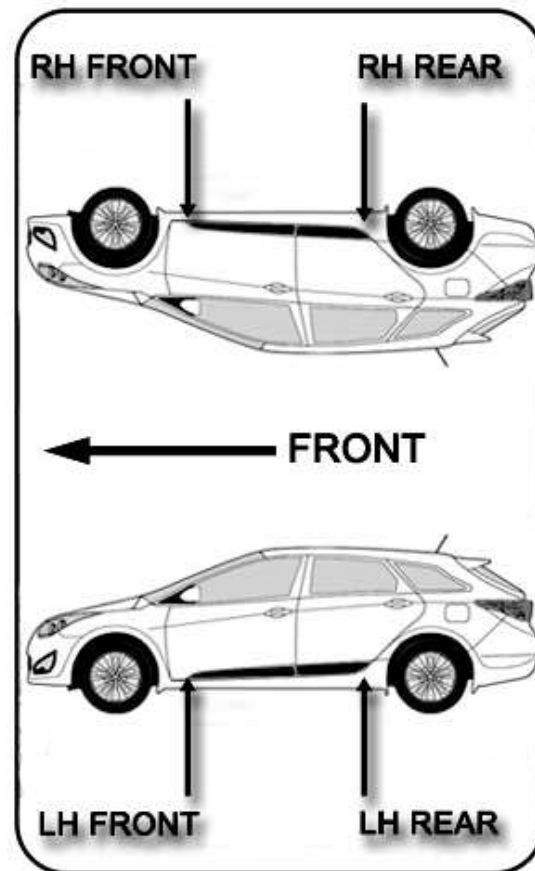



HYUNDAI i 40 CW 2011↑

PU Side Mouldings

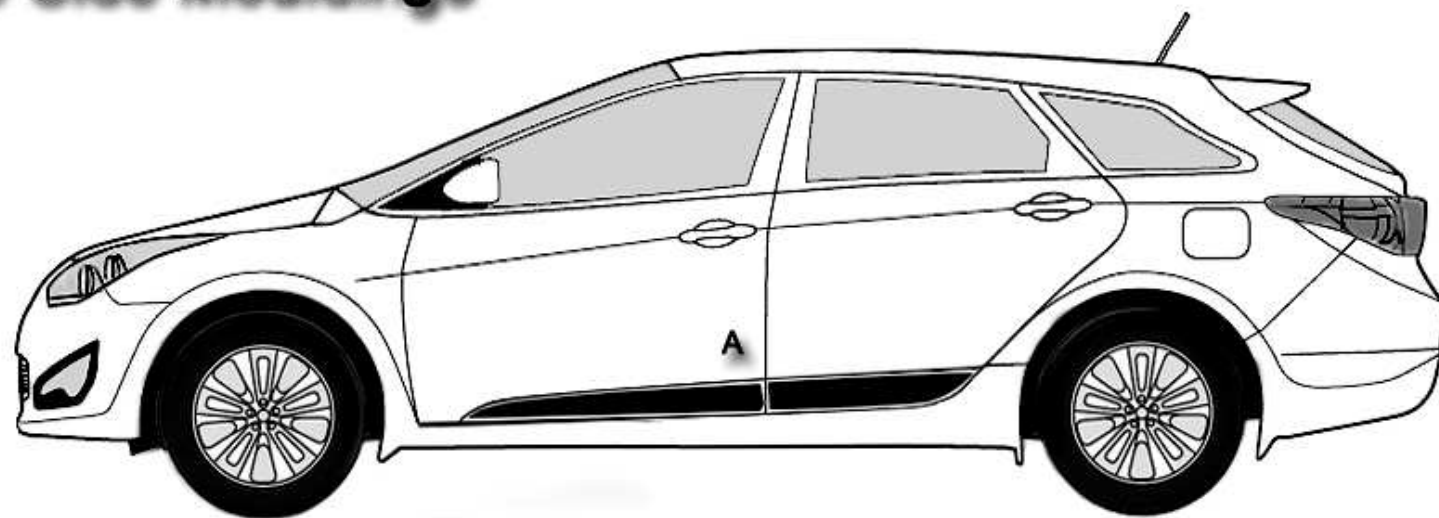


Degrease/entletten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

1

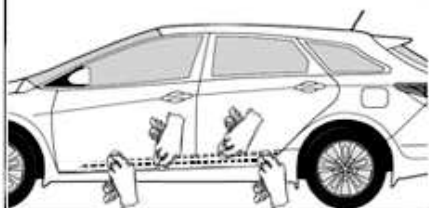


20-40 °C


2

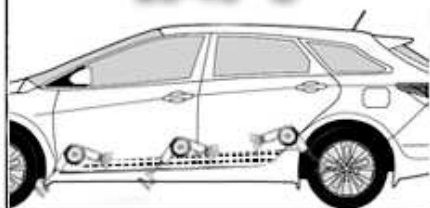

3

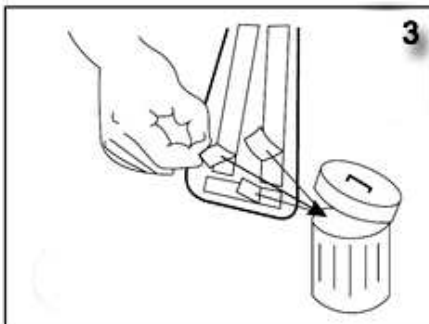

4

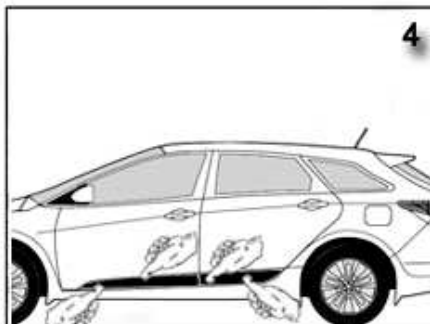

48h



5



Iedere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

