
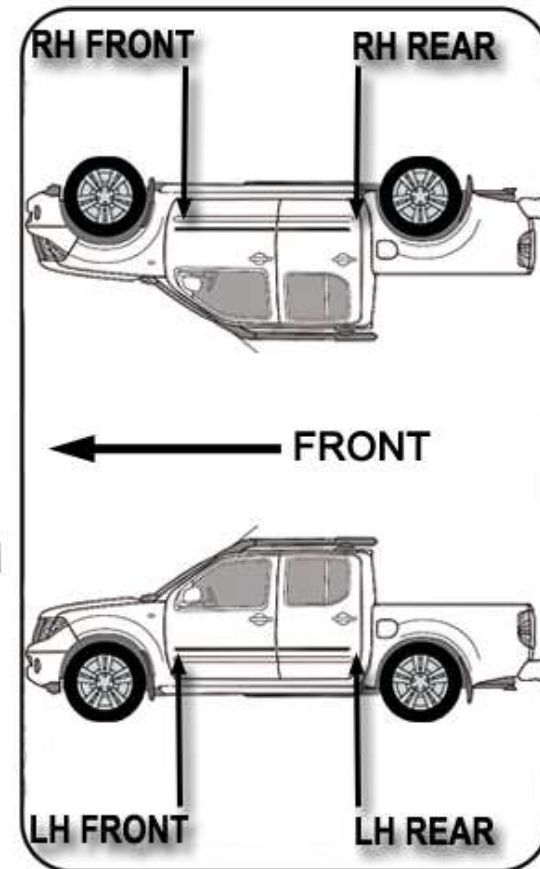



NISSAN NAVARA 2007 ↑

PU Side Mouldings

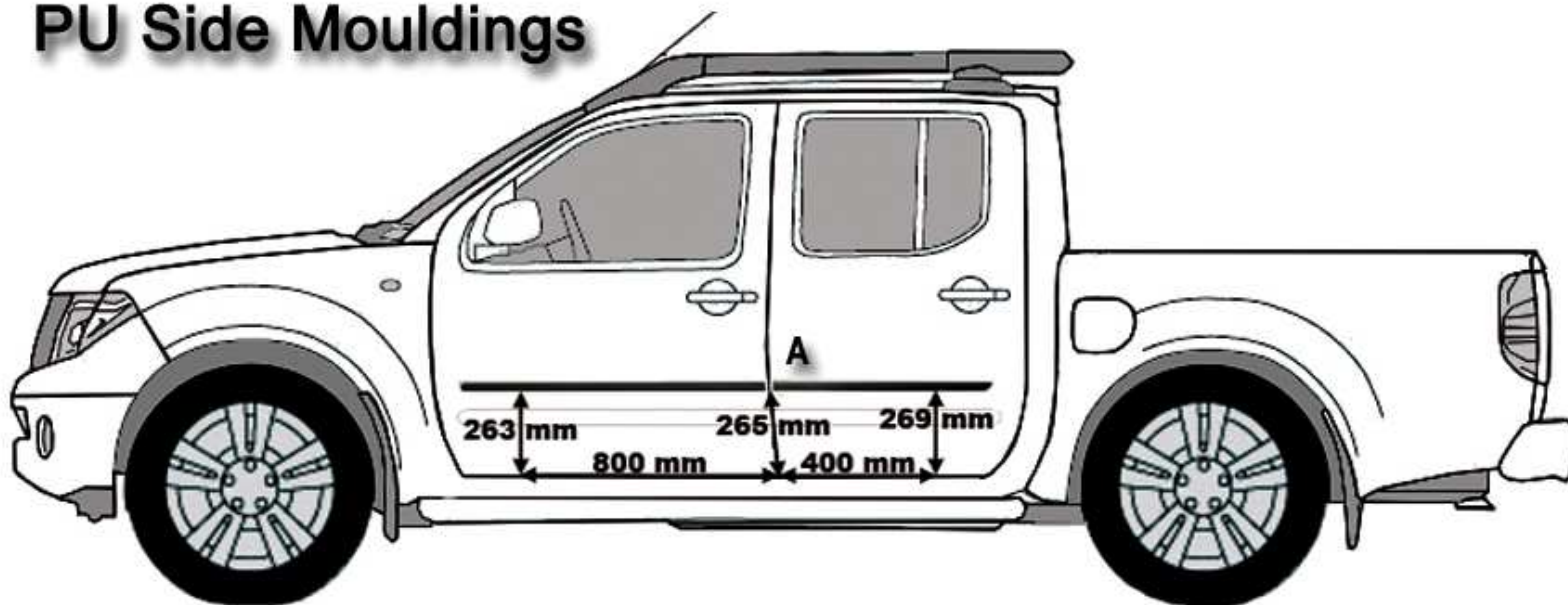


Degrease/entletten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

1

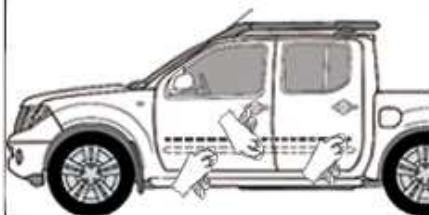


20-40 °C


2

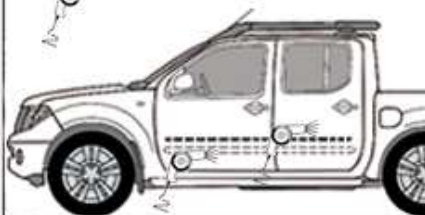

3

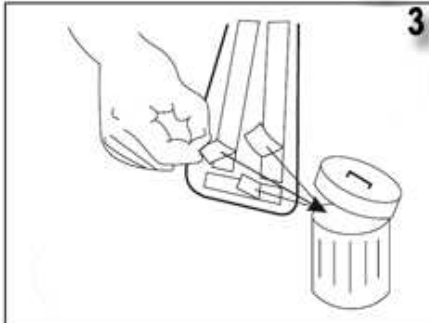


4

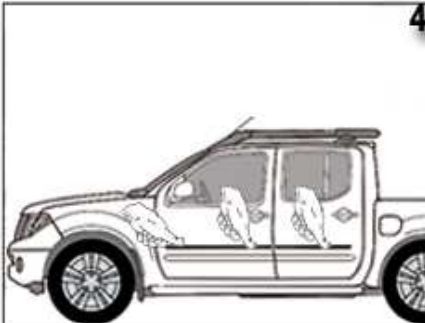

48h



5

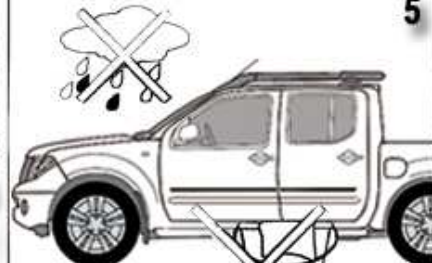

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrucken jeden cm !!

