

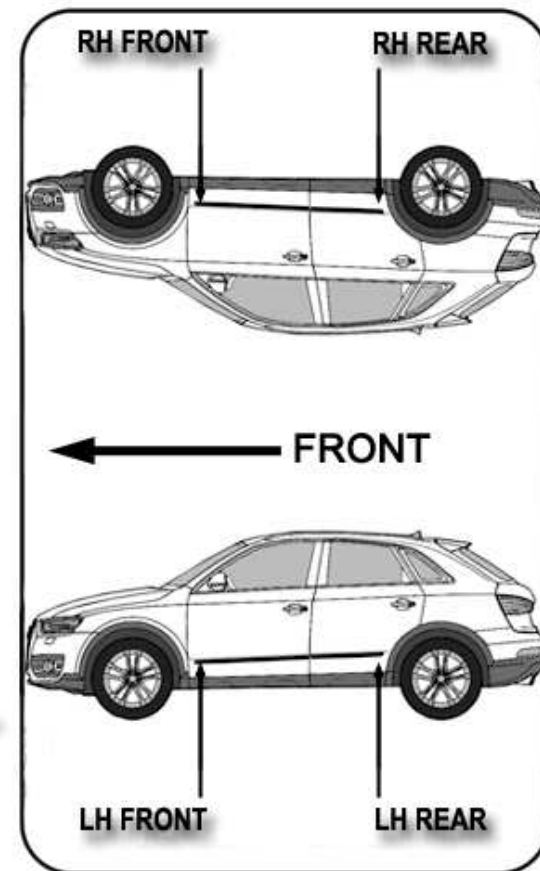


# AUDI Q3 2011 ↑


## PU Side Mouldings

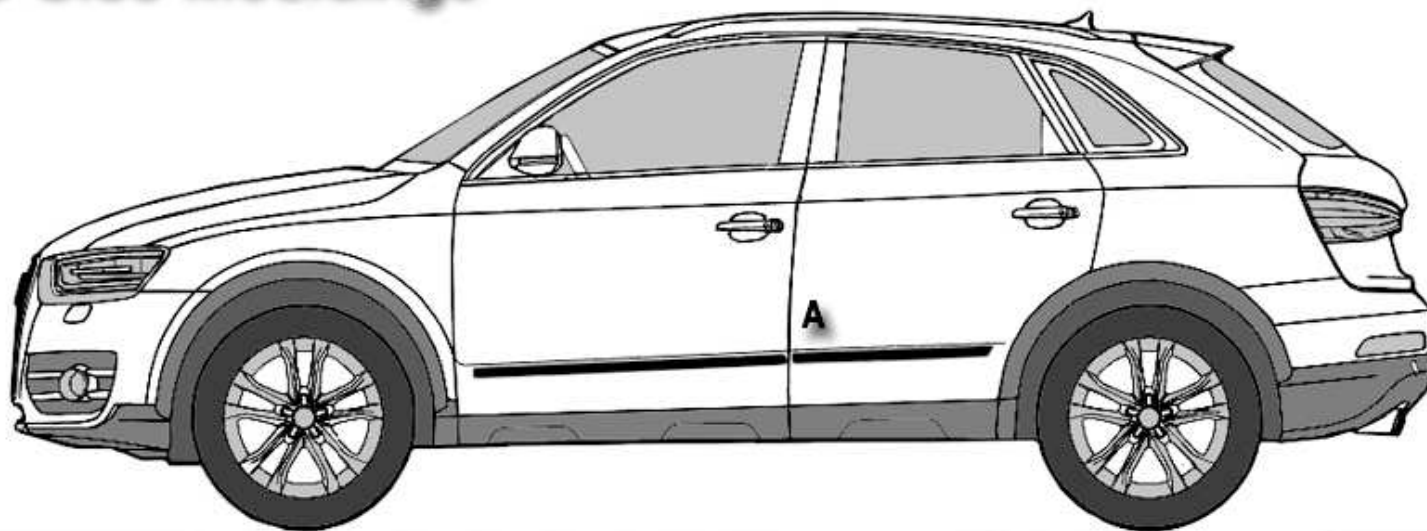

Degrease/entletten/degraisser/ontvetten  
Alcohol/Alkohol/Alcool/Alcohol 1

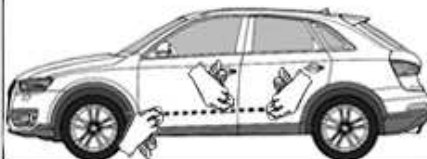


20-40 °C 2

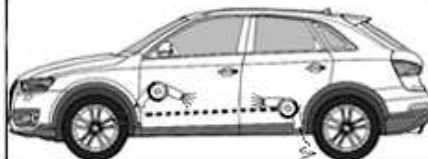

3



4

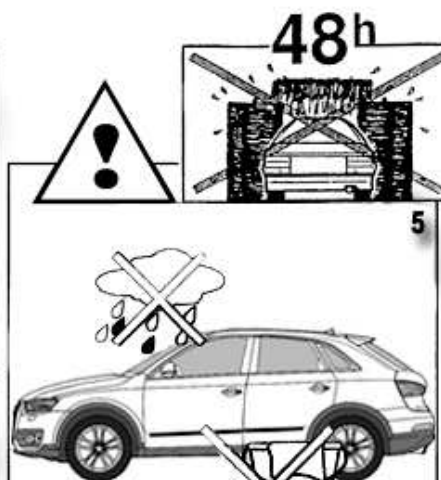

ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrucken jeden cm !!

