


Škoda Rapid Spaceback 2013 ↑

PU Side Mouldings

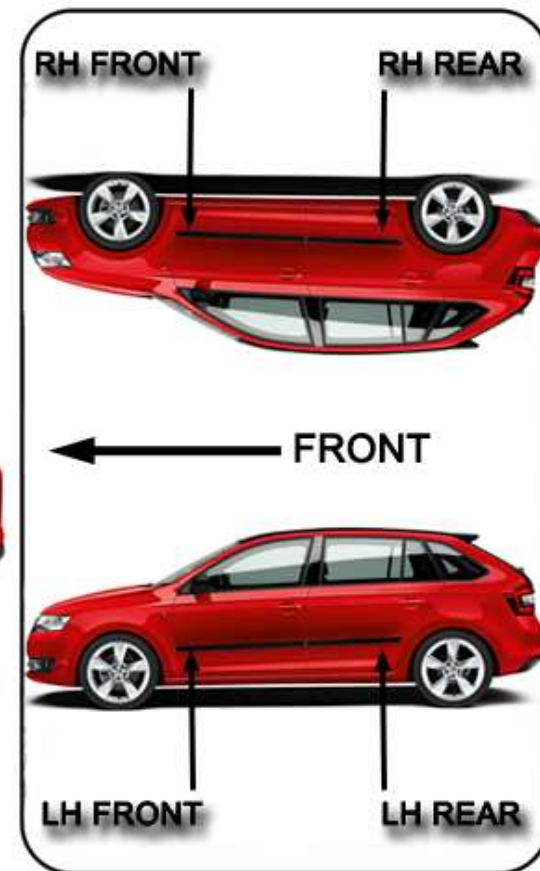

Degrease/entletten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

1



20-40 °C


2



5



3

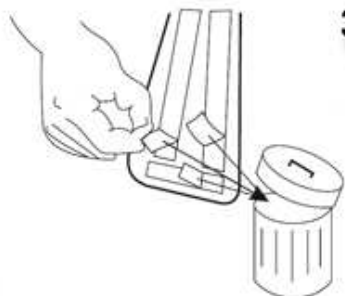

4



Iedere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

