

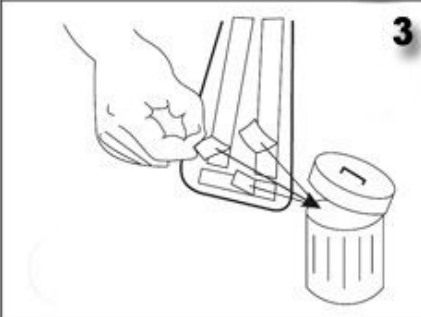
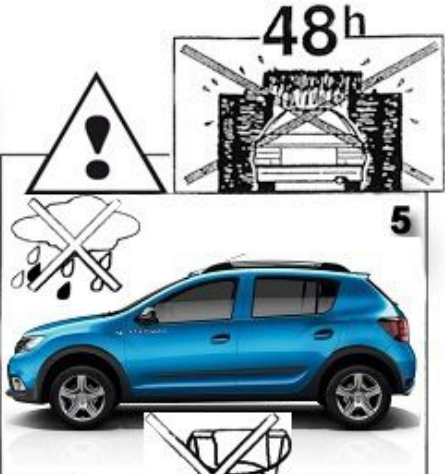


Dacia Sandero Stepway II 2013→ PU Side Mouldings F-31

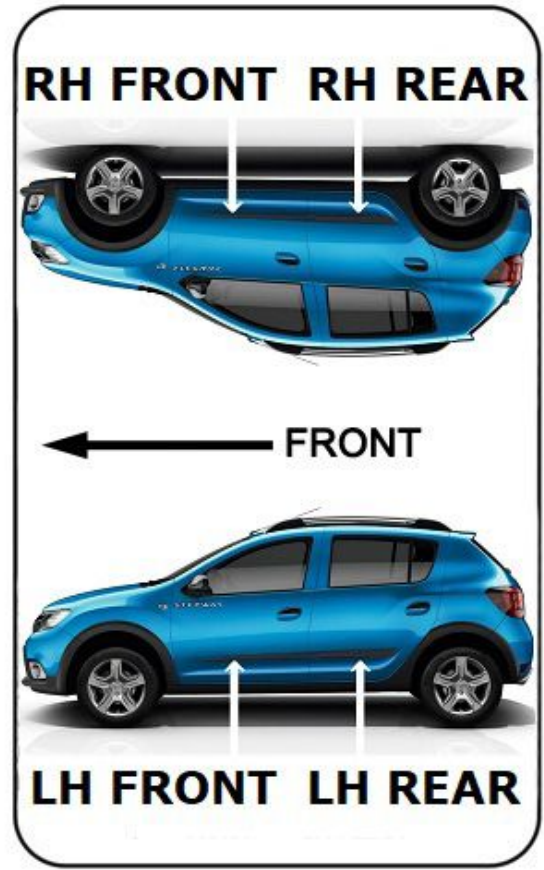

!
ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

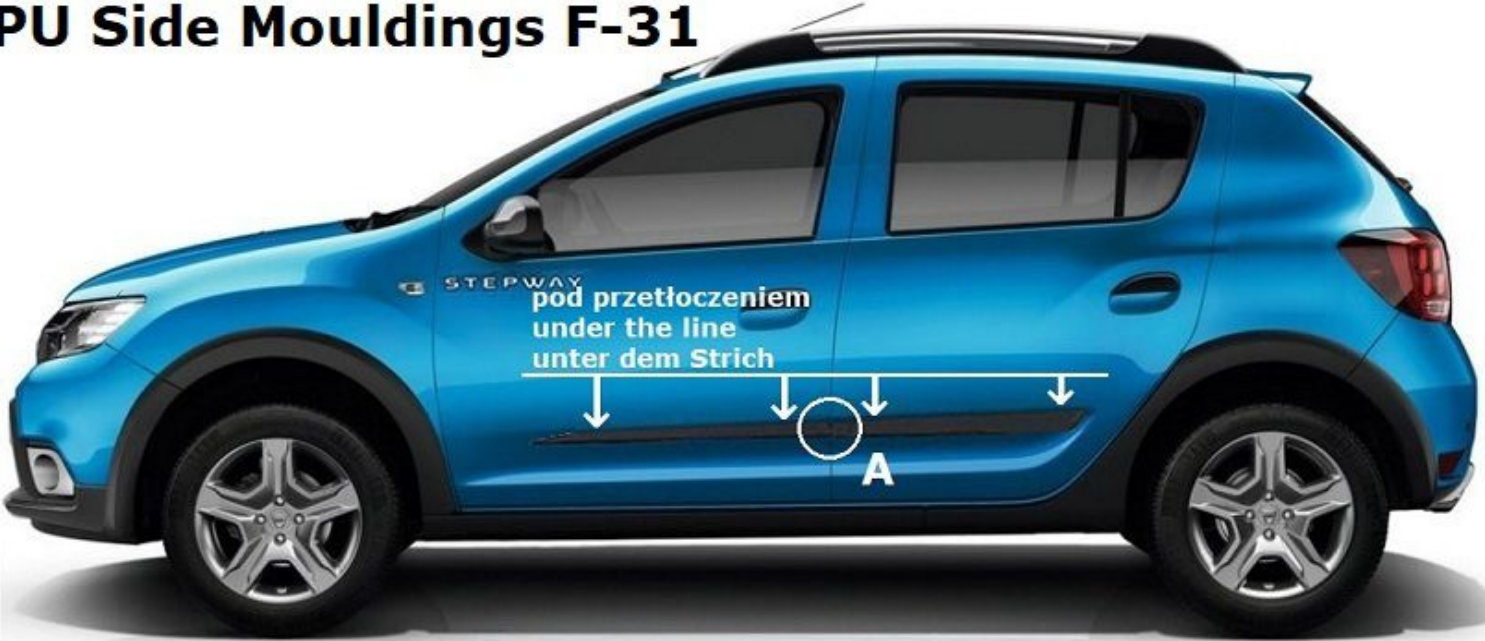