



Volkswagen T5 (long)







PU side mouldings

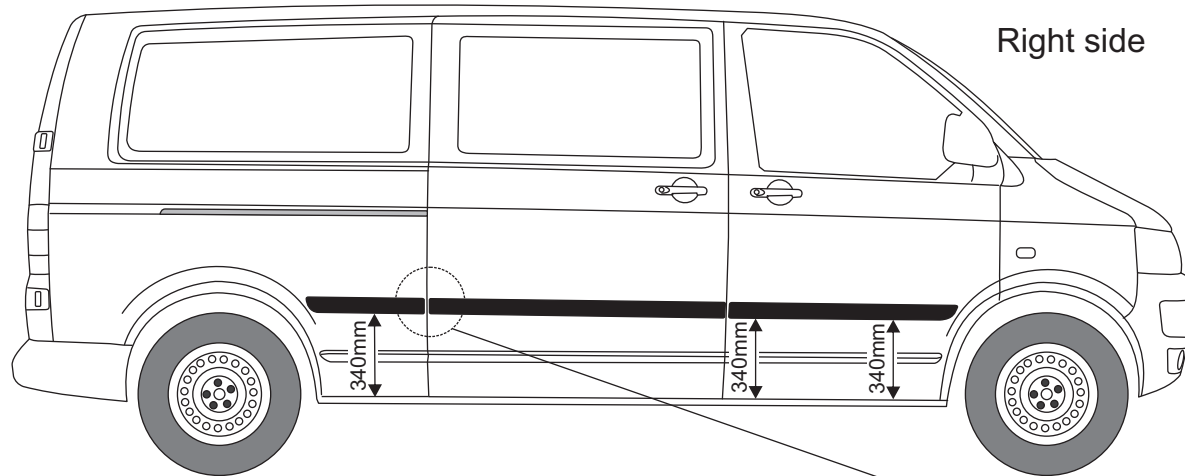

Right side

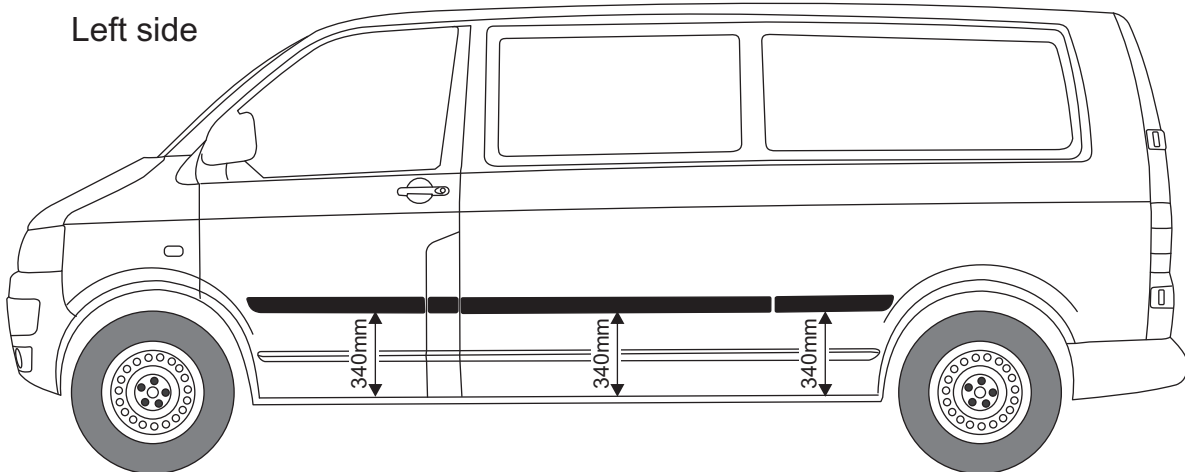

Left side

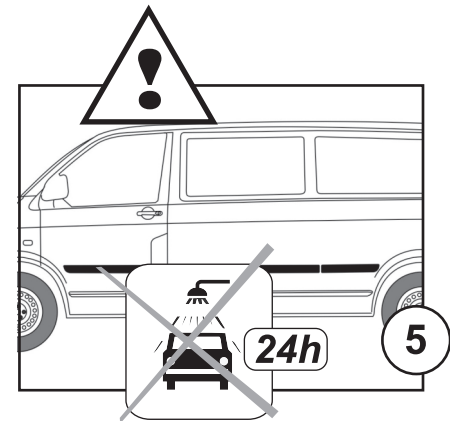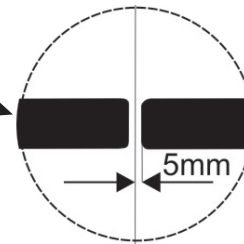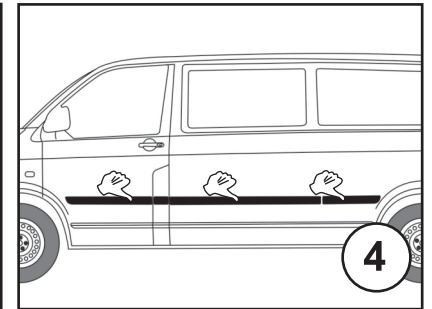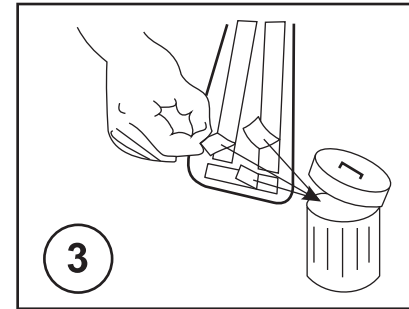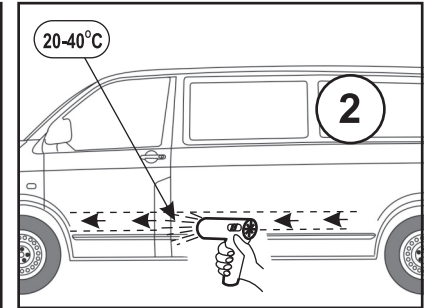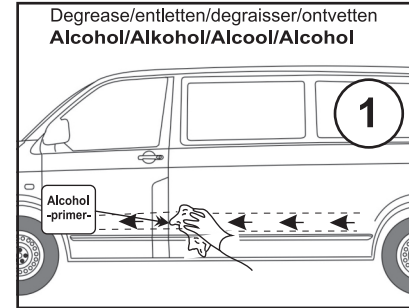

Iedere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrukken jeden cm !!