









Volkswagen T5

PU side mouldings

Right side

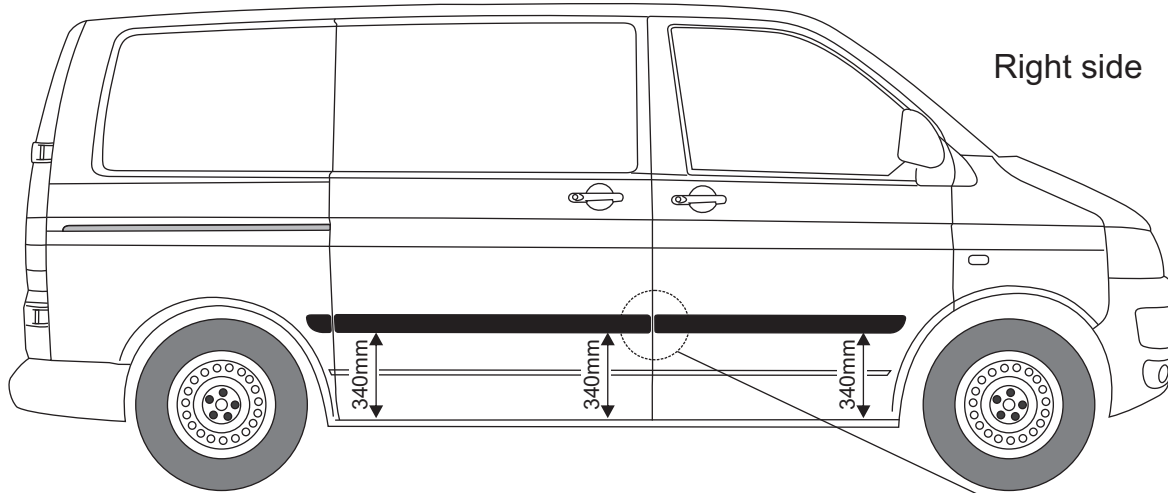

Left side

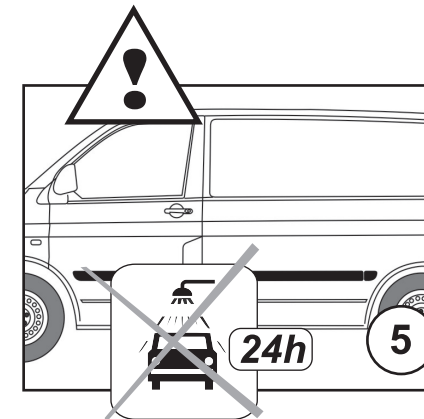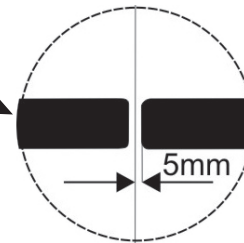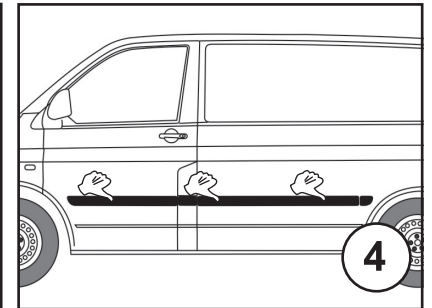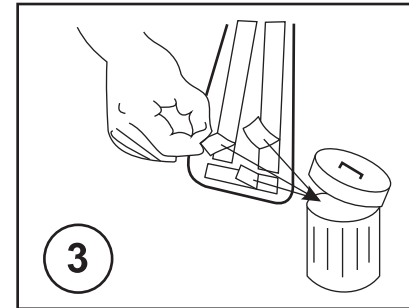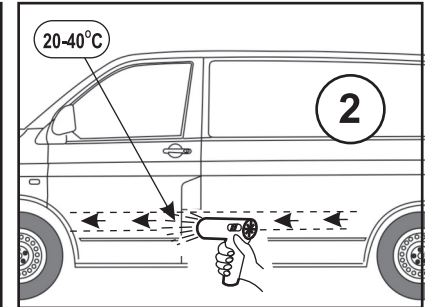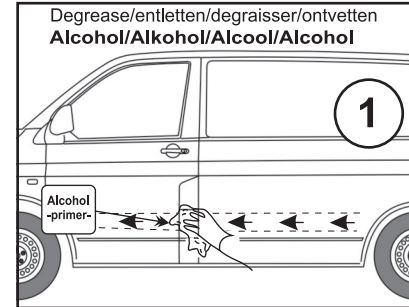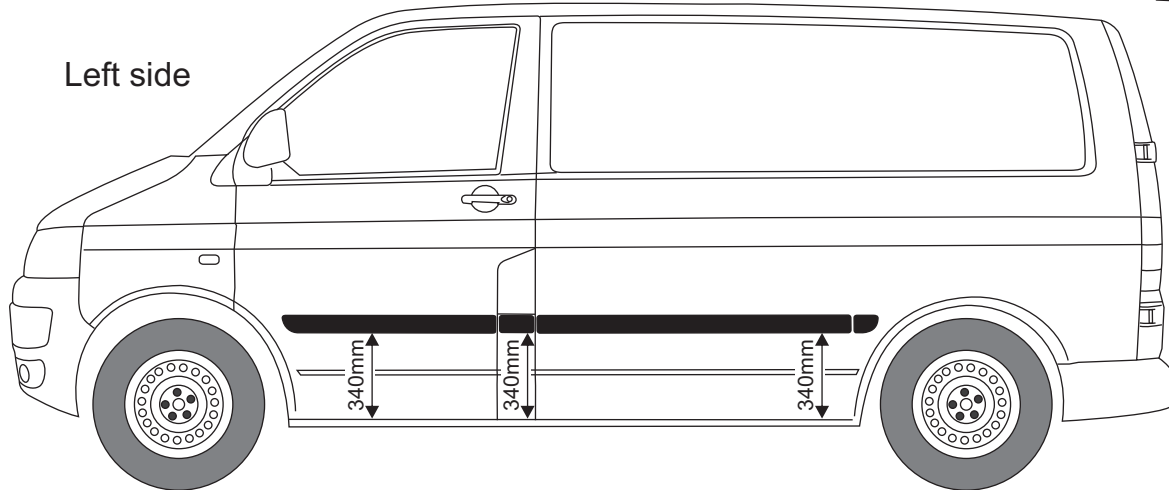

Iedere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!